


RUSTIC BARNWOOD

by Synergy Wood™

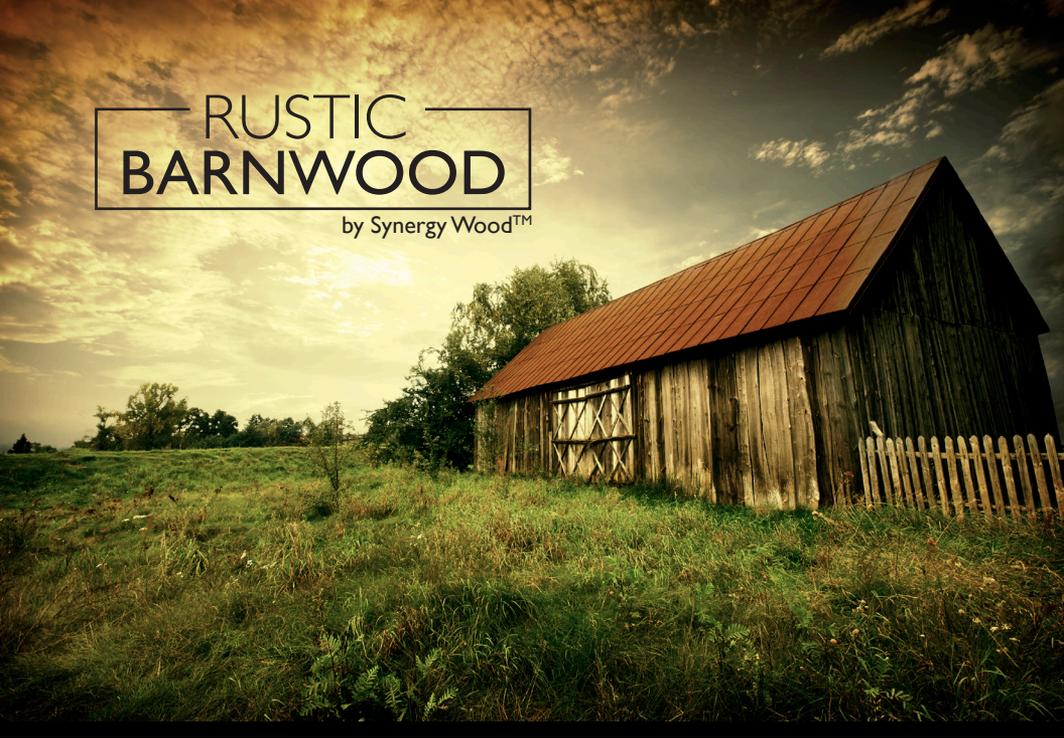

3031 S. Mellonville Ave. // Sanford, FL 32773
p: 321.397.2000 // tf: 866.791.6714

SYNERGYWOOD.COM    

INSTALLATION GUIDE

Rustic Barnwood by Synergy Wood™ combines the natural beauty of reclaimed wood with the longevity and strength of cypress through our unique manufacturing process. Each plank is rough-sawn, distressed and hand-finished in your choice of five standard colors providing an authentic, weathered appearance.

All our planks are tongue and groove and end-matched to allow for less waste and simple installation. Rustic Barnwood planks are produced in five widths - 2", 3", 4", 5" and 7" - and all planks are 70" in length. Each width has a slight variation in thickness providing an authentic reclaimed aesthetic. Each box contains a mixture of widths and covers 27.22 sq. ft. of wall or ceiling space.

RECOMMENDED MATERIALS

Tape Measure

Nail Gun

Rubber Mallet/Hammer

Scribing Tool

Masking/Blue Tape for Marking

Air Compressor (for nail gun)

Circular Saw/Hand Saw/Jig Saw

15 gauge x 2" Galvanized Nails

INSTALLATION

Due to the variation of Rustic Barnwood plank widths, it is recommended to **only work with 2-3 boxes of wood at a time**. Unlike traditional wood wall application, Rustic Barnwood requires an artistic, well-thought-out approach to ensure plank placement, as well as seams, are randomized. This will provide an authentic reclaimed look-and-feel, as well as reduce waste. Remember: measure twice, cut once!


PLANK COMBINATIONS

Have fun creating your own patterns! To achieve a random plank appearance in installation, however, we've included some of our favorite combinations to run the full length of wall or ceiling in your application. These suggestions have been used successfully in other applications but get creative to make your own unique installation! Plank numbers refer to the width of each board. (See images on back page.) If you plan to use a recommended combination, make sure you plan properly for the required amount of planks to complete a section.



For the top section, trim tongue and back of groove at an angle for easier board placement at top of wall.

5

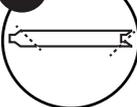

1 Lay out stud placement on wall.

1


2 Apply construction adhesive to backs of planks.

2



4 Apply planks to wall using blind nailing with a nail gun.

4

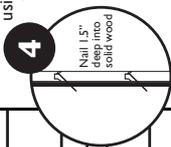

Nail 1 1/2" deep into solid wood

3


Place plank on wall and use a level to establish a level baseline. This is the baseline for your installation. Be sure to use the level periodically as you install additional sections.

*Diagram is for instructional purposes only. Boards are not to scale.


SAMPLE PLANK COMBINATIONS

Below are some Synergy Wood favorite combinations - we encourage you to be creative and find patterns that work for your unique application.


7" RUN

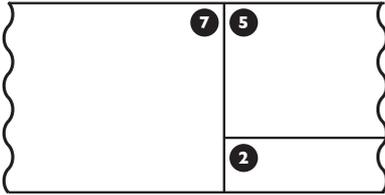


9" RUN

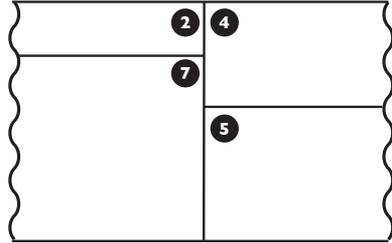

10" RUN

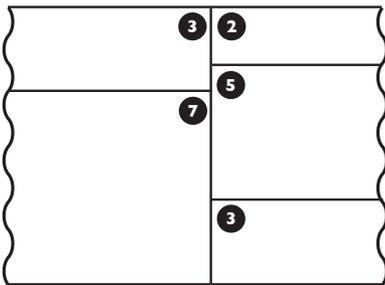

11" RUN

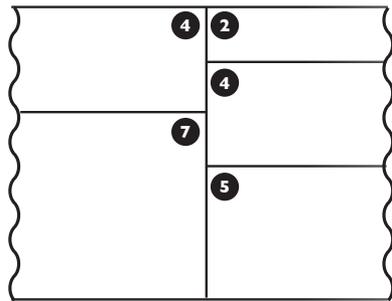

*Diagrams are for informational purposes to serve as recommendation only. Planks are not to scale.

**Please see installation video at synergywood.com for detailed steps and information about touch-up.